



Compatibility Chart

Last update: Jan 2017

Nikon Cameras

Nissin Model	D2Xs	D3 / D3X	D3s	D4	D4s	D5	D40 / D40X	D50	D60	D70 / D70s	D80	D90	D200	D300	D300s	D500	D600	D610	D700	D750	D800	D800E	D810	D3000	D3100	D3200	D3300	D3400	D5000	D5100	D5200	D5300	D5500	D7000	D7100	D7200	Df	Coolpix A	Coolpix P5000	Coolpix P5100	Coolpix P7700
MG8000 Extreme	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○
MF18	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○
Di866 Mark II	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	
Di700	○	●	●	●	●	○	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	○	○	○	○		
Di700 A	○	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○		
Air 1 Commander	○	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Di600	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
i40	○	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
i60A	○	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	

- Compatible Model
- Latest Firmware is Required
- FV Lock system does not work
- SD Mode not supported

	Nissin Flashes						Nikon Flashes			
	i40 Nikon	Di466 Nikon	Di622 II / Di600 Nikon	Di700 Nikon	Di866 II Nikon	MG8000 Nikon	SB-700	SB-800	SB-900	SB-910
Air R Nikon	●	●	●	●	●	●	●	●	●	●

- Compatible Model
- GN Mode. 25-49
- GN Mode. 50-65



Compatibility Chart

Last update: June 2016

Sony Cameras

	Alpha 7	Alpha 7II	Alpha 7R	Alpha 7R II	Alpha 7S	Alpha 7S II	Alpha 100	Alpha 200	Alpha 230	Alpha 290	Alpha 300	Alpha 330	Alpha 350	Alpha 380	Alpha 390	Alpha 450	Alpha 500	Alpha 550	Alpha 560	Alpha 580	Alpha 700	Alpha 850	Alpha 900	Alpha 3000	Alpha 6000	Alpha 6300	Alpha SLT A33	Alpha SLT A55V	Alpha SLT A57	Alpha SLT A58	Alpha SLT A65	Alpha SLT A77	Alpha SLT A77 II	Alpha SLT A99	NEX-6	NEX-7	RX1	RX10	RX100 II	HX60V					
Nissin Model																																													
Di700A	●	●	●	●	●	●	●	●	●	●	○	●	●	●	○	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●		
Air 1 Commander	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
i40	●	●	●	●	●	●	●	●	●	●	○	●	●	●	○	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
i60A	●	●	●	●	●	●	●	●	●	○	●	●	●	○	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

- Compatible Model
- Firmware update is required
- Firmware update is required + Use the Sony Shoe Adaptor (ADP-MAA)
- Use the Sony Shoe Adaptor (ADP-AMA)
- No information available. TBC

	Nissin Flashes		Sony Flashes					
	i40 Sony	Di622 II Sony	Di866 II Sony	HVL-F32M	HVL-F42AM	HVL-F43M	HVL-F58AM	HVL-F60M
Air R Sony	●	●	●	●	●	●	●	●

- Compatible Model
- Use the Sony Shoe Adaptor (ADP-MAA)
- GN Mode. 25-49
- GN Mode. 50-65



Compatibility Chart

Last update: Jan 2017

Olympus Micro Four Thirds / Four Thirds Cameras

	E-M1 (OMD)	E-M5 (OMD)	E-M5 Mark II (OMD)	E-M10 (OMD)	E-M10 Mark II (OMD)	E-P1	E-P2	E-P3	E-P5	PEN-F	E-PL1	E-PL2	E-PL3	E-PL5	E-PL6	E-PL7	E-PM1	E-PM2	E-30	E-410	E-500	E-520	E-620
--	------------	------------	--------------------	-------------	---------------------	------	------	------	------	-------	-------	-------	-------	-------	-------	-------	-------	-------	------	-------	-------	-------	-------

Nissin Model																							
i60A (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
i40 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Di466 (Four Thirds)	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Di700A (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Air 1 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

Panasonic Micro Four Thirds Cameras

	Lumix GX1	Lumix GX7	Lumix GX7 MK2	Lumix GX8	Lumix GH-1	Lumix GH-2	Lumix GH-3	Lumix G-1	Lumix G-2	Lumix G-3	Lumix G-5	Lumix G-7	Lumix DMC-G6	Lumix LX100	Lumix G-10	Lumix GF-1	Lumix GF-2	Lumix DMC LX3	Lumix DMC LX5	Lumix DMC LX7	Lumix FZ-200
--	-----------	-----------	---------------	-----------	------------	------------	------------	-----------	-----------	-----------	-----------	-----------	--------------	-------------	------------	------------	------------	---------------	---------------	---------------	--------------

Nissin Model																						
i60A (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
i40 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Di466 (Four Thirds)	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Di700A (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Air 1 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

- Compatible Model
- Hi-Speed sync not supported
- Camera may become unstable during EVF mode



Compatibility Chart

Last update: Jan 2017

Fujifilm Cameras

	X-T1 / X-T1 GS	X-T2	X-T10	X-Pro2	X-Pro1	X-E2S	X-E2	X-E1	X-M1	X-A2	X-A1	X-100T	X-100S	X-100	X-70	X-30	X-20	X-10	X-S1	HS50EXR	HS30EXR	HS20EXR	
Nissin Model																							
i40 (Fujifilm)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
i60A (Fujifilm)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
Di700A (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
Air 1 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○

● Compatible Model

● Fujifilm camera's firmware update is required. For more information, please visit the fujifilm official website.

*Currently the Fujifilm system does not support High speed synchronize function.